

3-6. REMOVAL OF THE MAIN LEVER UNIT

- 1) Remove the 3 cut washers.
- 2) Remove the MAIN LEVER UNIT.

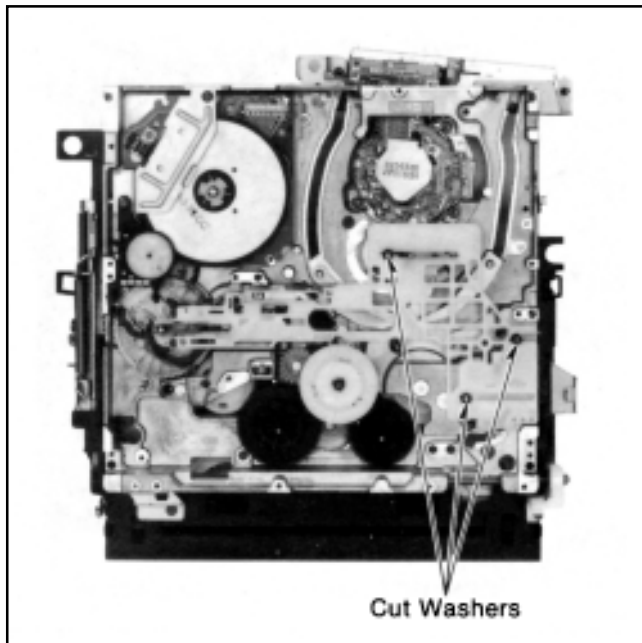


Fig. A5

3-7. REMOVAL OF THE TAKE-UP AND SUPPLY LOADING ARMS

- 1) Remove the TAKE-UP and SUPPLY LOADING GEARS by lifting them up off the post.

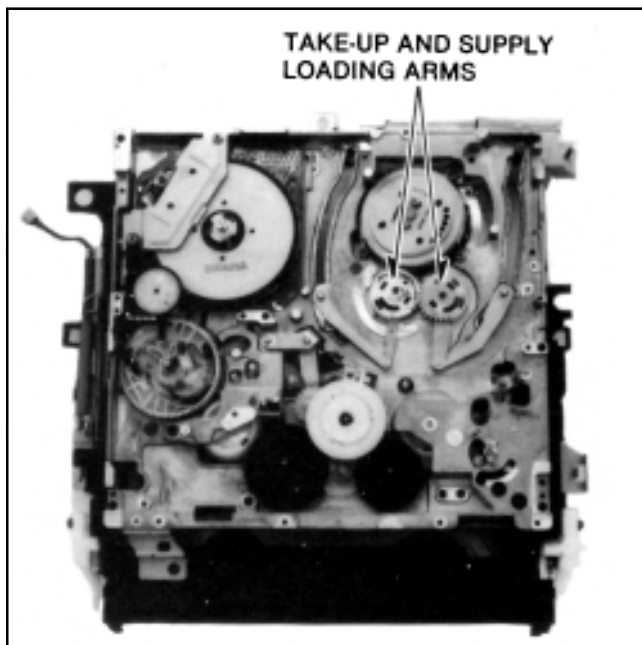


Fig. A6

3-8. REMOVAL OF THE MODE SWITCH

- 1) Remove screw(F).
- 2) Remove the MODE SWITCH.

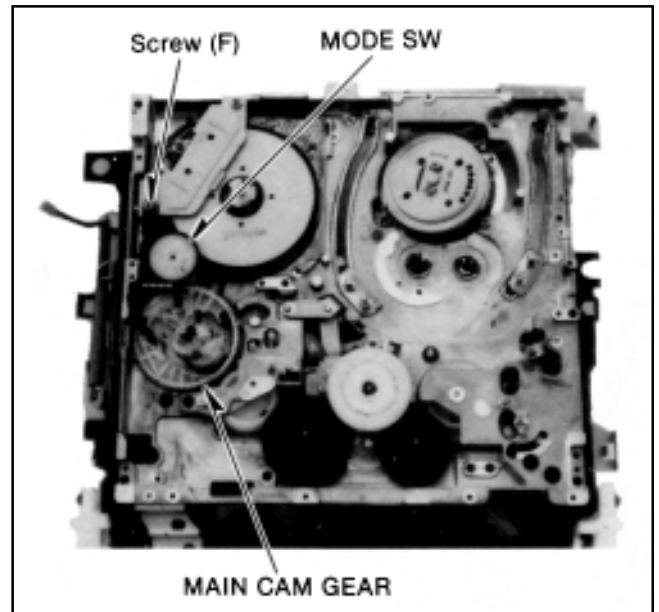


Fig. A7

3-9. REMOVAL OF THE MAIN CAM GEAR

- 1) Lift the MAIN CAM GEAR off the shaft.

3-10. REMOVAL OF THE CAPSTAN ROTOR UNIT

- 1) Remove the screw(G) and remove the CAPSTAN STOPPER as shown in Fig.A8.

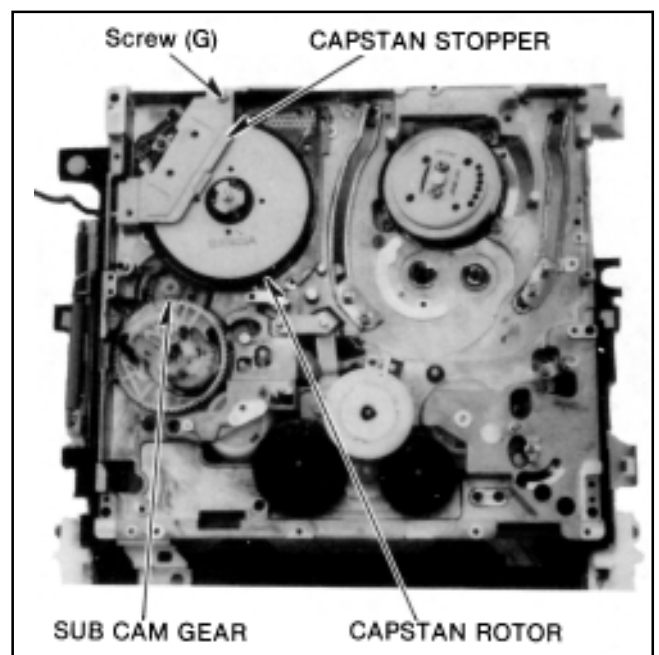


Fig. A8